

Tel:0086-755-29015125
Mail:info@delincomm.com
Web:www.delincomm.com

# General Description

The EB1612P-G is a receiving module that supports single-band&multi-mode. It has built-in highly integrated GNSS receiver chip, supports multi band and multi system cm4f (main frequency 350mhz, 22nm Technology) chip of Third-generation BeiDou Navigation Satellite System (BDS-3). Besides, it is capable of tracking all global civil navigation systems (BDS,GPS,GLONASS,Galileo,QZSS and SBAS) in all bands.

EB1612P-G e is based on the state of art BDS -3 architecture, integrating single- band and multisystem GNSS RF and base band. This newly designed architecture makes this single chip achieve sub-meter level position accuracy without correction data from ground-based augmentation station and higher sensitivity, greater for improved jam resistance and multipath, provide a highly robust service in complicated environment.

EB1612P-G module contains BK1616P positioning engine inside, featuring high sensitivity, low power consumption, and fast TTFF. The superior cold start sensitivity allows it to acquire, track, and get position fix autonomously in difficult weak signal environment. The receiver's superior tracking sensitivity allows continuous position coverage in nearly all outdoor application environments. The high performance signal parameter search engine is capable of testing 16 million time-frequency hypotheses per second, offering superior signal acquisition and TTFF speed.

## **Applications**

- LBS (Location Based Service)
- PND (Portable Navigation Device)
- Vehicle navigation system
- Mobile phone



Figure: EB1612P-G Top View

### **Features**

- Build on high performance, low-power BK1616P chip set
- Ultra high Track sensitivity: -165dBm
- Concurrent reception of Single-Band and multisystem satellite signals
- Supports all civil GNSS signals
- Supports BDS-3 signal
- Extremely fast TTFF at low signal level
- Multipath detection and suppression
- Works with passive and active antenna
- Low power consumption: Max 35mA@3.3V
- NMEA-0183 compliant protocol or custom protocol
- Operating voltage: 2.8V to 3.6V
- SMD type with stamp holes
- Small form factor:  $16\pm0.6x12.2\pm0.2x2.4\pm0.2mm$

Revision: V1.0.0-October 2024

- Operating temperature  $-40^{\circ}\text{C} \sim +85^{\circ}\text{C}$
- RoHS compliant (Lead-free)



Tel:0086-755-29015125
Mail:info@delincomm.com
Web:www.delincomm.com

# 1. Functional Description

## 1.1. Key Features

**Table 1: Key Features** 

Table 1: Key Features Parameter	Specification
Power Supply	• Supply voltage: 2.8V~3.6V, Typical: 3.3V
Power Consumption	<ul> <li>Acquisition: 35mA @VCC=VBAT=3.3V</li> <li>Tracking: 35mA @VCC=VBAT=3.3V</li> <li>Standby: 1.5mA @VCC=VBAT=3.3V</li> <li>Backup: 20uA @VBAT=3.3V</li> </ul>
GNSS engine	<ul> <li>96 tracking channels with fast search engine</li> </ul>
GNSS reception	<ul> <li>GPS/QZSS: L1</li> <li>BDS: B1I . B1C</li> <li>GLONASS: L1</li> <li>Galileo: E1</li> <li>SBAS: WAAS.EGNOS.MSAS.GAGAN</li> </ul>
Update rate	GNSS: 10Hz Maximum
Position accuracy	<ul> <li>GNSS: &lt;1.5m CEP</li> <li>SBAS: &lt;1.5m CEP</li> </ul>
Velocity & Time accuracy	<ul> <li>GNSS: 0.01m/s CEP</li> <li>SBAS: 0.05 m/s</li> <li>1PPS: 20 ns</li> </ul>
Time to First Fix(TTFF)	<ul> <li>Hot start: 1.0 s</li> <li>Cold start: 28 s</li> <li>AGPS: 1.5s</li> </ul>
Sensitivity	<ul> <li>Cold start: -148dBm</li> <li>Hot start: -165dBm</li> <li>Re-acquisition: -159dBm</li> <li>Tracking &amp; navigation: -165dBm</li> </ul>
GNSS Operating limit	<ul><li>Velocity: 515m/s</li><li>Altitude: 18000m</li></ul>
Datum	• Default WGS-84, User definable
UART Port	<ul> <li>UART Port: TX and RX</li> <li>Supports baud rate from 9600bps to 961200bps, 115200bps by default.</li> <li>NMEA 0183 Protocol Ver 4.10, BK GNSS Receiver Protocol</li> <li>Supports batch data report mode</li> </ul>
Temperature Range	<ul> <li>Normal operation: -40°C ~ +85°C</li> <li>Storage temperature: -55°C ~ +125°C</li> <li>Humidity: 5% ~ 95%</li> </ul>
Physical Characteristics	<ul> <li>Size: 16±0.6 × 12.2±0.2 × 2.4±0.2mm</li> <li>Weight: Approx. 0.9g</li> </ul>

Tel:0086-755-29015125
Mail:info@delincomm.com
Web:www.delincomm.com

### 1.2. Block Diagram

The EB1612P-G is a high performance (BDS, GPS, GLONASS, Galileo, QZSS and SBAS) in all bands. satellite navigation receiver in a compact surface mount package. It is based on the BK1616P positioning technology, providing high performance signal acquisition and tracking. The simple UART serial interface and the standard NMEA-0183 protocol make usage of EB1612P very easy and straight forward.

The EB1612P-G module performs all the necessary system initialization, signal acquisition, signal tracking, data demodulation, and calculation of navigation solution autonomously.

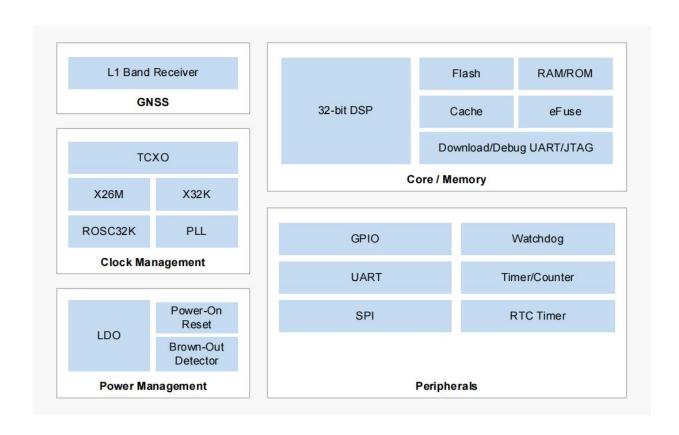


Figure 1: Block Diagram

Tel:0086-755-29015125
Mail:info@delincomm.com
Web:www.delincomm.com

# 2. Application

The module is equipped with a 24-pin SMT pad that connects to your application platform. Sub-interfaces included in the pad are described in details in the following chapters.

### 2.1. Pin Assignment

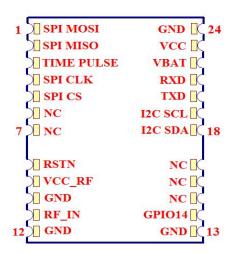


Figure 2: Pin Assignment

### 2.2. Pin Definition

Pin No.	Name	Description	
1	SPI MOSI	Serial port SPI MOSI port,leave it vacant when not in use	
2	SPI MISO	Serial port SPI MISO port,leave it vacant when not in use	
3	TIME PULSE	PPS OUT PUT	
4	SPI CLK	Serial port SPI CLK port,leave it vacant when not in use	
5	SPI CS	Serial port SPI CS port,leave it vacant when not in use	
6.7.15.16.17	NC	No connect	
8	RSTN	RESET leave it vacant when not in use	
9	VCC_RF	Active antenna power supply	
10	GND	Power GND	
11	RF_IN	L1 RF input	
12	GND	Power GND	
13	GND	Power GND	
14	GPIO14	JTAG_TDO,leave it vacant when not in use	
18	I2C SDA	Serial port I2C SDA port,leave it vacant when not in use	
19	I2C SCL	Serial port I2C SCL port,leave it vacant when not in use	
20	TXD	Serial port TXD port	
21	RXD	Serial port RXD port	
22	VBAT	Backup battery2.8V3.3V,leave it vacant when not in use	
23	VCC	Working voltage: 2.8-3.6V,Recommended use: 3.3V	
24	GND	Power GND	

Tel:0086-755-29015125
Mail:info@delincomm.com

Web:www.delincomm.com

### 2.3. Electrical Specification

### **Operating Conditions**

Parameter	Min	Тур	Max	Unit
Supply Voltage (VCC)	2.8	3.3	3.6	Volt
Acquisition Current (exclude active antenna current)		35		mA
Tracking Current (exclude active antenna current)		35		mA
I/O port &UART port working voltage:				
Output Low Voltage	-		0.4	Volt
Output HIGH Voltage	2.4		-	Volt
Input LOW Voltage	0.3		0.7	Volt
Input HIGH Voltage	2.1		3.6	Volt
Input LOW Current	-10		10	uA
Input HIGH Current	-10		10	uA
RF Input Impedance (RFIN)		50		Ohm

### **Absolute Maximum Ratings**

Parameter	Minimum	Maximum	Condition
Supply Voltage (VCC)	-0.5	3.6	Volt
Input Pin Voltage	-0.5	VCC+0.5	Volt
Input Power at RF_IN		+20	dBm
Storage Temperature	-55	+125	degC

#### 2.4. UART Interface

The module provides one universal asynchronous receiver& transmitter serial port. The module is designed as DCE (Data Communication Equipment), following the traditional DCE-DTE (Data Terminal Equipment) connection. The module and the client (DTE) are connected through the signals shown in the following figure. It supports data baud-rate from 9600bps to 961200bps.

### **UART port:**

TXD: Send data to the RXD1 signal line of DTE.

RXD: Receive data from the TXD1 signal line of DTE.

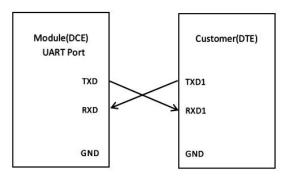


Figure 3:Serial Port Connection



Tel:0086-755-29015125

Mail:info@delincomm.com

Web:www.delincomm.com

### This UART port has the following features:

- UART port can be used for NMEA Protocol output and proprietary commands input.
- The default output NMEA type setting is GGA,GSA,GSV,RMC
- UART port supports the following data rates:
  9600, 14400, 19200, 38400, 57600, 115200, 961200bps.
  115200bps by default, 8 bits, no parity bit, 1 stop bit.
- Hardware flow control and synchronous operation are not supported.

The UART port does not support the RS-232 level but only CMOS level. If the module's UART port is connected to the UART port of a computer, it is necessary to add a level shift circuit between the module and the computer. Please refer to the following figure.

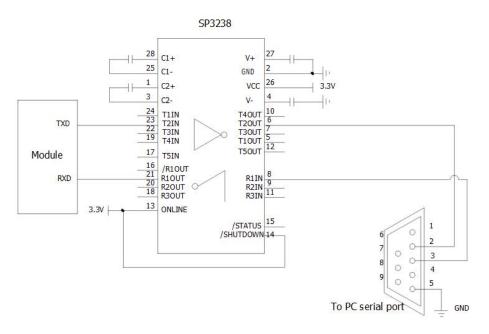


Figure 4: RS-232 Level Shift Circuit

# 3. Antenna Consideration

The EB1612P is designed to use with active antenna, and passive antenna with higher antenna gain.

Passive ceramic patch antenna is low-cost and provides good sensitivity. 50-ohm output larger size ceramic patch antenna with higher antenna gain can be connected directly to RF input of the module. Usually the ceramic patch antenna and EB1612P-G are mounted on opposite side of the PCB to reduce possibility of picking up digital noise. To improve signal reception performance, use larger ground plane under the patch antenna if possible; larger the ground plane, larger the overall antenna gain. The center frequency of the ceramic patch antenna changes with ground plane size. For optimal L1 peration, frequency bandwidth of the antenna needs to cover  $1174MHz \sim 1179MHz$  and  $1573MHz \sim 1606MHz$  respectively when mounted on the PCB. It is usual to ask the ceramic patch antenna vendor to select or tune a patch antenna that best matches the customer PCB.

Active antenna is essentially a passive antenna with built-in LNA and a coaxial cable to connect the antenna to the module. It has the flexibility of being located remotely from the module, but requires antenna power. Active antenna usually costs more than passive patch antenna, but the performance in low signal environments is usually better. Active antenna with gain of  $10\sim20 dB$  and noise figure less than 1.5dB can be used with EB1612P-G .



Tel:0086-755-29015125
Mail:info@delincomm.com
Web:www.delincomm.com

Antenna Type	Passive	Active
GPS&QZSS Frequency (MHz) SBAS	1575.42 +/- 2 (L1)	1575.42 +/- 2 (L1)
BDS Frequency (MHz)	1561 .098+/- 2(B1I) 1575.42+/- 2(B1C)	1561 .098+/- 2(B1I) 1575.42+/- 2(B1C)
GLONASS Frequency (MHz)	1602MHz +/- 4(L1)	1602MHz +/- 4(L1)
GALILEO Frequency (MHz)	1575.42 +/- 2 (E1)	1575.42 +/- 2(E1)
VSWR	< 2 (typical)	< 2 (typical)
Polarization	RHCP	RHCP
Antenna Gain	> 0dBi	> -2dBi
LNA Gain		20dB (typical)
Noise Figure		< 1.5dB
Total Gain		> 18dBi

# 4. Power Supply Requirement

EB1612P-G requires a stable power supply, avoid ripple on VCC pin (<50mVpp). Power supply noise can affect the receiver's sensitivity. Bypass capacitors of 10uF and 0.1uF is recommended to be placed close to the module VCC pin; the values could be adjusted according to the amount and type of noise present on the supply line.

# 5.Backup Supply

The purpose of backup supply voltage pin (VBAT) is to keep the SRAM memory and the RTC powered when the module is powered down. This enables the module to have a faster time-to-first-fix when the module is powered on again. The backup current drain is less than  $12\mu$ A. In normal powered on state, the internal processor access the SRAM and current drain is higher in active mode.

# **6.1PPS Output**

When using four or more satellites for 3D positioning, the rising edge of the pulse generating 1 pulse per second (Duration: 800 seconds) on 1PPS pins is aligned with the UTC seconds, and the accuracy is about 20nS. When it is not positioned, it outputs a constant low pulse.

Mail:info@delincomm.com
Web:www.delincomm.com

# 7. Layout Guidelines

### Separate RF and digital circuits into different PCB regions.

It is necessary to maintain 50-ohm impedance throughout the entire RF signal path. Try keeping the RF signal path as short as possible.

Do not route the RF signal line near noisy sources such as digital signals, oscillators, switching power supplies, or other RF transmitting circuit. Do not route the RF signal under or over any other components (including EB1612P), or other signal traces. Do not route the RF signal path on an inner layer of a multi-layer PCB to minimize signal loss. Avoid sharp bends for RF signal path. Make two 45-deg bends or a circular bend instead of a single 90-degree bend if needed.

Avoid vias with RF signal path whenever possible. Every via adds inductive impedance. Vias are acceptable for connecting the RF grounds between different layers. Each of the module's ground pins should have short trace tying immediately to the ground plane below through a via.

The bypass capacitors should be low ESR ceramic types and located directly adjacent to the pin they are for.

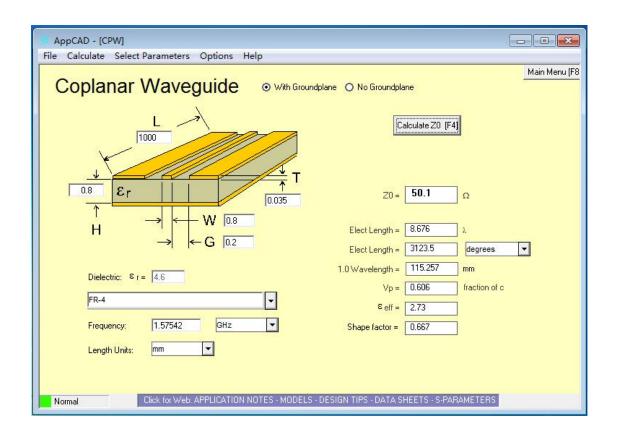


Figure 5: Requires Of Antenna Design

Mail:info@delincomm.com

Web:www.delincomm.com

# 8.ESD handling precautions

EB1612P-G series modules are Electrostatic Sensitive Devices (ESD).

### Observe precautions for handling!

#### Failure to observe these precautions can result in severe damage to the GPS receiver!

GPS receivers are Electrostatic Sensitive Devices (ESD) and require special precautions when handling. Particular care must be exercised when handling patch antennas, due to the risk of electrostatic charges. In addition to standard ESD safety practices, the following measures should be taken into account whenever handling the receiver:

Unless there is a galvanic coupling between the local GND(i.e. the work table) and the PCB GND, then the first point of cont act when handling the PCB must always be between the local GND and PCB GND.



- ♦ Before mounting antenna patch, connect ground of the device When handling the RF pin, do not come into contact with any charged capacitors and be careful when contacting materials that can develop charges (e.g. patch antenna ~10pF, coax cable ~50-80pF/m, soldering iron....)
- ❖ To prevent electrostatic discharge through the RF input, do not touch any exposed antenna area. If there is any risk that such exposed antenna area is touched in non ESD protected work area, implement proper ESD protection measures in the design.
- ♦ When soldering RF connectors and patch antennas to the receiver's RF pin, make sure to use an ESD safe soldering iron



(tip).

Table 1: ESD Endurance Table (Temperature : 25°C, Humidity: 45%)

Pin	Contact Discharge	Air Discharge	
RF_IN	±5KV	±10KV	
VCC	±5KV	±10KV	
UART	±3KV	±6KV	
Others	±2KV	±4KV	

Mail:info@delincomm.com Web:www.delincomm.com

# 9. Mechanical Dimensions

This chapter describes the mechanical dimensions of the module.

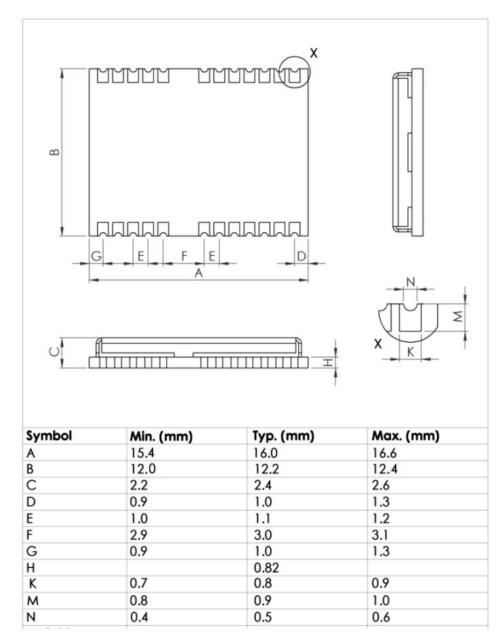


Figure 6: Top view Dimensions

# 10 .Manufacturing, Packaging and Ordering Information

### 10.1. Assembly and Soldering

EB1612P-G module is intended for SMT assembly and soldering in a Pb-free reflow process on the top side of the PCB. It is suggested that the minimum height of solder paste stencil is 100um to ensure sufficient solder volume. Pad openings of paste mask can be increased to ensure proper soldering and solder wetting over pads. It is suggested that the peak reflow temperature is 220~240°C (for SnAg3.0Cu0.5 alloy). The absolute maximum reflow temperature is 260°C. To avoid damage to the module when it is repeatedly heated, it is suggested that the module should be mounted after reflow soldering for the other side of PCB has been completed. Recommended reflow soldering thermal profile is shown below:

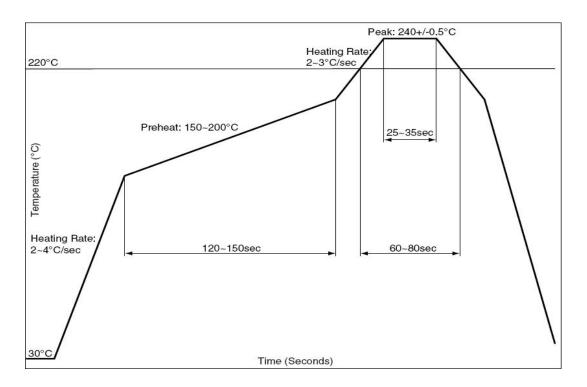


Figure 7: Recommended Reflow Soldering Thermal Profile

### 10.2. Moisture Sensitivity

EB1612P-G module is sensitive to moisture. To prevent EB1612P-GGBfrom permanent damage during reflow soldering, baking before reflow soldering is required in following cases:


- ♦ Humidity indicator card: One or more indicating spots are no longer blue.
- ♦ The seal is opened and the module is exposed to excessive humidity.

EB1612P-G shall be baked for 192 hours in a cryogenic environment at 40°C+5°C/-0°C and<5%RH, or for 24 hours in a high-temperature environment at 125°C±5°C. As the plastic packaging tape is not heat-resistant, the module should be removed from the tape before baking, otherwise, the tape will be damaged due to high temperature heating, you can also refer to the actual production technology of the SMT factory.



Mail:info@delincomm.com
Web:www.delincomm.com

### 10.3. Tape and Reel Packaging

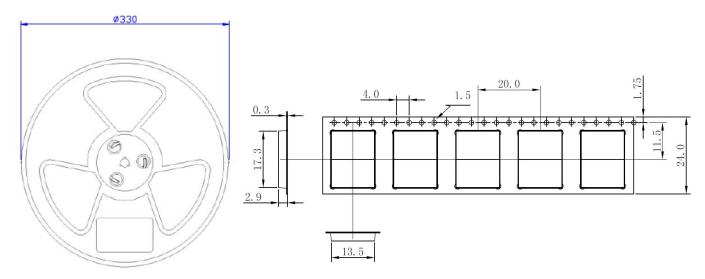

Unit: mm

Quantity per reel:1000pcs Lengh per reel: 20m

Figure 8: Tape and Reel Specifications





Figure 9: Packaging physical Figure

**Table 2: Reel Packaging** 

Model Name	MOQ for MP	Minimum Package: 1000pcs	
		Size: $365 \text{mm} \times 350 \text{mm} \times 53 \text{mm}$	
EB1612P-G	1000pcs	N.W: 0.9 kg	
		G.W: 1.48kg ( $\pm 3\%$ )	



Tel:0086-755-29015125

Mail:info@delincomm.com

Web:www.delincomm.com

## 11. NMEA 0183 Protocol

The output protocol supports NMEA-0183 standard. The implemented messages include GGA,GSA,GSV, RMC,GLL,VTG messages. The NMEA message output has the following sentence structure: \$AACCC, c-c\*hh.

The formats of the supported NMEA messages are described as follows: \$GNRMC,\$GNGLL,\$GNGGA,\$GNGSA\$GPGSV,\$BDGSV,\$GLGSV,\$GAGSV,\$GNVTG

### 11.1 GGA – Global Positioning System Fix Data

Field	Name	Example	Description
1	UTC Time	175258.000	UTC of position in hhmmss.sss format, (000000.000 ~ 235959.999)
2	Latitude	2447.08700	Latitude in ddmm.mmmmm format Leading zeros transmitted
3	N/S Indicator	N	Latitude hemisphere indicator, 'N' = North, 'S' = South
4	Longitude	12100.52210	Longitude in dddmm.mmmm format Leading zeros transmitted
5	E/W Indicator	Е	Longitude hemisphere indicator, 'E' = East, 'W' = West
6	Quality Indicator	2	Quality Indicator 0: position fix unavailable 1: valid position fix, SPS mode 2: valid position fix, differential GPS mode 3: GPS PPS Mode, fix valid 6: Estimated (dead reckoning) Mode
7	Satellites Used	15	Number of satellites in use, $(00 \sim 56)$
8	HDOP	0.7	Horizontal dilution of precision, (0.0 ~ 99.9)
9	Altitude	95.2	mean sea level (geoid), ( - 9999.9 ~ 17999.9)
10	Geoidal Separation	19.6	Geoidal separation in meters
11	Age pf Differential GPS data		Age of Differential GPS data NULL when DGPS not used
12	DGPS Station ID	0000	Differential reference station ID, 0000 ~ 1023
13	Checksum	72	

#### 11.2 GSA – GNSS DOP and Active Satellites

GNSS receiver operating mode, satellites used in the navigation solution reported by the GGA sentence and DOP values.





Mail:info@delincomm.com

Web:www.delincomm.com

Field	Name	Example	Description
1	Mode	A	Mode 'M' = Manual, forced to operate in 2D or 3D mode 'A' = Automatic, allowed to automatically switch 2D/3D
2	Mode	3	Fix type  1 = Fix not available  2 = 2D  3 = 3D
3	Satellite used 1~12	21, 12, 15, 18, 20, 24, 10, 32, 25, 13	01 $\sim$ 32 are for GPS; 33 $\sim$ 64 are for WAAS (PRN minus 87); 193 $\sim$ 197 are for QZSS; 65 $\sim$ 88 are for GLONASS (GL PRN); 01 $\sim$ 36 are for GALILEO (GA PRN); 01 $\sim$ 37 are for BDS (BD PRN). GPS, GLONASS, GALILEO and BDS satellites are differentiated by the GNSS system ID in table 3. Maximally 12 satellites are included in each GSA sentence
4	PDOP	1.2	Position dilution of precision (0.0 to 99.9)
5	HDOP	0.7	Horizontal dilution of precision (0.0 to 99.9)
6	VDOP	1.0	Vertical dilution of precision (0.0 to 99.9)
7	GNSS System ID	1	1 for GPS, 2 for GLONASS, 3 for GALILEO, 4 for BDS
8	Checksum	18	

### 11.3 GSV – GNSS Satellites in View

Number of satellites (SV) in view, satellite ID numbers, elevation, azimuth, and SNR value. Four satellites maximum per transmission.

For example: \$GPGSV, 4,1, 13, 02,72, 109, 43,24, 69,035, 48,18, 52,330, 42,21, 49,246, 43, 1\*69

Field	Name	Example	Description
1	Number of message	4	Total number of GSV messages to be transmitted (1 - 5)
2	Sequence number	1	Sequence number of current GSV message
3	Satellites in view	13	Total number of satellites in view $(00 \sim 20)$
4	Satellite ID	02	$01 \sim 32$ are for GPS; $33 \sim 64$ are for WAAS (PRN minus 87); $193 \sim 197$ are for QZSS; $65 \sim 88$ are for GLONASS (GL PRN); $01 \sim 36$ are for GALILEO (GA PRN); $01 \sim 37$ are for BDS (BD PRN). GPS, GLONASS, GALILEO and BDS satellites are differentiated by the GNSS system ID in table 3. Maximally 12 satellites are included in each GSA sentence
5	Elevation	72	Satellite elevation in degrees, $(00 \sim 90)$
6	Azimuth	109	Satellite azimuth angle in degrees, (000 ~ 359)
7	SNR	43	C/No in dB (00 ~ 99) Null when not tracking
8	Signal ID	1	1 for L1/CA
9	Checksum	69	



Tel:0086-755-29015125
Mail:info@delincomm.com
Web:www.delincomm.com

### 11.4 RMC – Recommended Minimum Specific GNSS Data

Time, date, position, course and speed data provided by a GNSS navigation receiver.

Structure: \$GNRMC,hhmmss.sss,A,dddmm.mmmm,a,dddmm.mmmm,a,x.x,x.x,ddmmyy,,,a\*hh For example: \$GNRMC,175258.000,A,2447.0870,N,12100.5220,E,000.0,000.0,220617,,,D\*75

Field	Name	Example	Description
1	UTC time	175258.000	UTC time in hhmmss.sss format (000000.00 ~ 235959.999)
2	Status	A	Status 'V' = Navigation receiver warning 'A' = Data Valid
3	Latitude	2447.08700	Latitude in dddmm.mmmmm format Leading zeros transmitted
4	N/S indicator	N	Latitude hemisphere indicator 'N' =North 'S' = South
5	Longitude	12100.52210	Longitude in dddmm.mmmmm format Leading zeros transmitted
6	E/W Indicator	Е	Longitude hemisphere indicator 'E' = East 'W' = West
7	Speed over ground	000.0	Speed over ground in knots (000.0 ~ 999.9)
8	Course over ground	000.0	Course over ground in degrees (000.0 ~ 359.9)
9	UTC Date	220617	UTC date of position fix, ddmmyy format
10	Mode indicator	D	Mode indicator 'N' = Data not valid 'A' = Autonomous mode 'D' = Differential mode 'E' = Estimated (dead reckoning) mode
11	checksum	75	

### 11.5 VTG – Course Over Ground and Ground Speed

The actual course and speed relative to the ground.

Structure: GNVTG,x.x,T,,M,x.x,N,x.x,K,a\*hh

For exam\_le: \$GNVTG,000.0,T,,M,000.0,N,000.0,K,D\*16

Field	Name	Example	Description
Field	Name	Example	Description
1	Course	0.000	True course over ground in degrees (000.0 ~ 359.9)
2	Speed	0.000	Speed over ground in knots (000.0 ~ 999.9)
3	Speed	0.000	Speed over ground in kilometers per hour (000.0 ~ 1800.0)
4	Mode	D	Mode indicator 'N' = Data not valid 'A' = Autonomous mode 'D' =  Differential mode 'E' = Estimated (dead reckoning) mode
5	Checksum	16	
	Checkban	10	



Tel:0086-755-29015125
Mail:info@delincomm.com
Web:www.delincomm.com

## 11.6 GLL – Latitude/Longitude

Latitude and longitude of current position, time, and status.

Structure: \$GNGLL,ddmm.mmmm,a,dddmm.mmmm,a,hhmmss.sss,A,a\*hh For example: \$GNGLL,2447.0870,N,12100.5221,E,175258.000,A,D\*42

Field	Name	Example	Description
1	Latitude	2447.08700	Latitude in ddmm.mmmmm format Leading zeros transmitted
2	N/S Indicator	N	Latitude hemisphere indicator 'N' = North 'S' = South
3	Longitude	12100.52210	Longitude in dddmm.mmmmm format Leading zeros transmitted
4	E/W Indicator	Е	Longitude hemisphere indicator 'E' = East 'W' = West
5	UTC Time	175258.000	UTC time in hhmmss.sss format (000000.000 ~ 235959.999)
6	Status	A	Status, 'A' = Data valid, 'V' = Data not valid
7	Mode Indicator	D	Mode indicator  'N' = Data not valid  'A' = Autonomous mode  'D' = Differential mode  'E' = Estimated (dead reckoning) mode
8	Checksum	42	